


# LIONEL ELECTRIC TRAINS

MODEL RAILROAD ACCESSORIES  
LIONEL CORPORATION TINPLATE

## No. 092 Signal Tower Item No. 11-90003

### Wiring Instructions

This model arrives requiring no assembly. Simply remove the model, place it in the desired location on your layout. Attach the wires from the model to your transformer, one wire to the ground and the second wire to the power. We recommend 14v fixed.

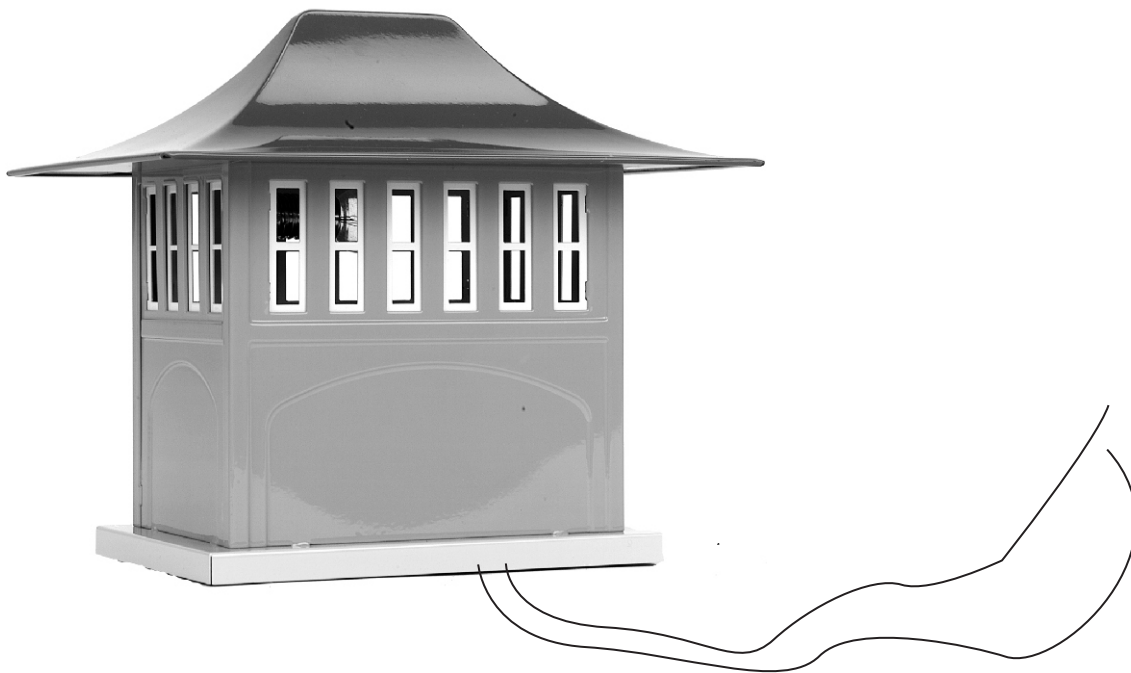

### **CAUTION: Electrically Operated Product:**

**Recommended for Ages 14 and up. Not recommended for children under 14 years of age without adult supervision. As with all electric products, precautions should be observed during handling and use to prevent electric shock.**

**WARNING:** When using electrical products, basic safety precautions should be observed, including the following:

Read this manual thoroughly before using this device.

- M.T.H. recommends that all users and persons supervising use examine the hobby transformer and other electronic equipment periodically for conditions that may result in the risk of fire, electric shock, or injury to persons, such as damage to the primary cord, plug blades, housing, output jacks or other parts. In the event such conditions exist, the train set should not be used until properly repaired.
- Do not operate your layout unattended. Obstructed accessories or stalled trains may overheat, resulting in damage to your layout.
- This train set is intended for indoor use. Do not use if water is present. Serious injury or fatality may result.
- Do not operate the hobby transformer with damaged cord, plug, switches, buttons or case.

**To obtain Warranty Service, please visit our website [www.lionelcorporation.com](http://www.lionelcorporation.com)**