


SCALE RR CROSSING WIRING & OPERATING INSTRUCTIONS

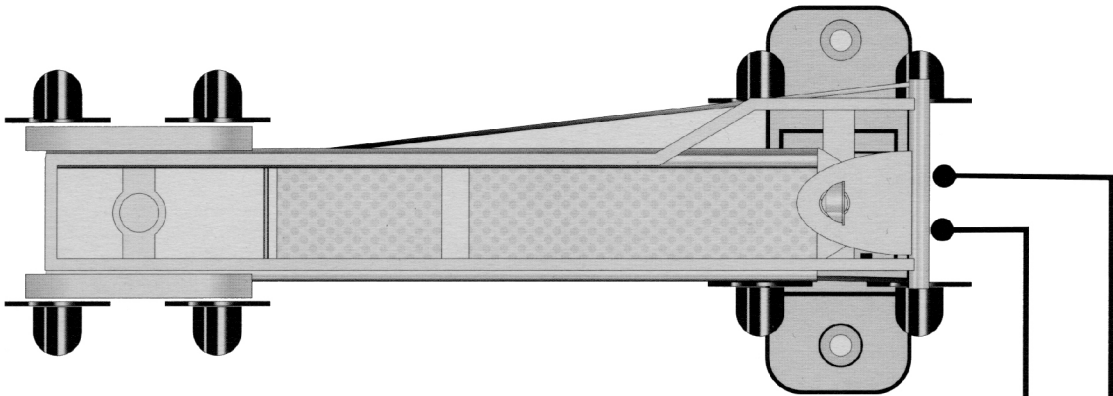

Wiring Instructions:


1. Attach a Lock-On and a Track Activation Device (TAD) to your layout near the location of the Scale RR Crossing.
2. Connect the Ground Terminal (Outside Rail) of the Lock-On to the BLACK wire of the Scale RR Crossing.
3. Connect the RED wire of the Scale RR Crossing to the Normally Open (NO) terminal of the TAD.
4. Connect the Powered Terminal (Center Rail) of the Lock-On to the Common Terminal of the TAD.

Mounting Instructions:

Use the screws included in the packaging to mount your RR Crossing Signal to your layout.

Operating Instructions:

The RailKing® Scale RR Crossing will be inactive when the line is clear. The signal lights will flash when the TAD is activated.

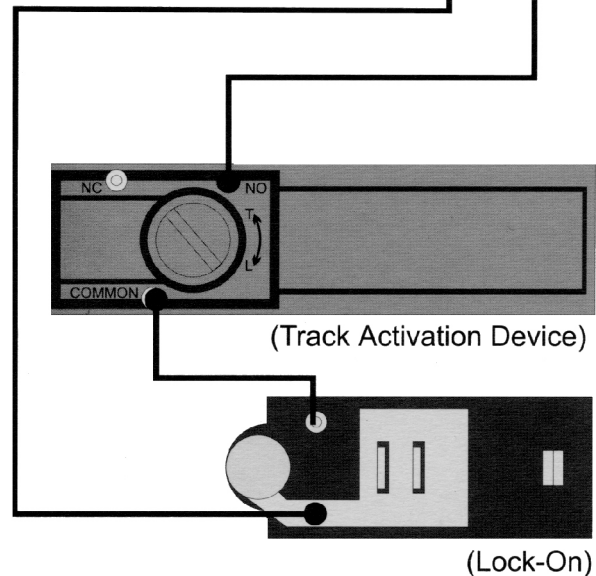

www.mthtrains.com

RailKing® is a registered trademark of M.T.H. Electric Trains.
M.T.H. Electric Trains, 7020 Columbia Gateway Drive, Columbia, MD 21046-1532