


O Ga. Track Activation Device
Item Number 10-1037

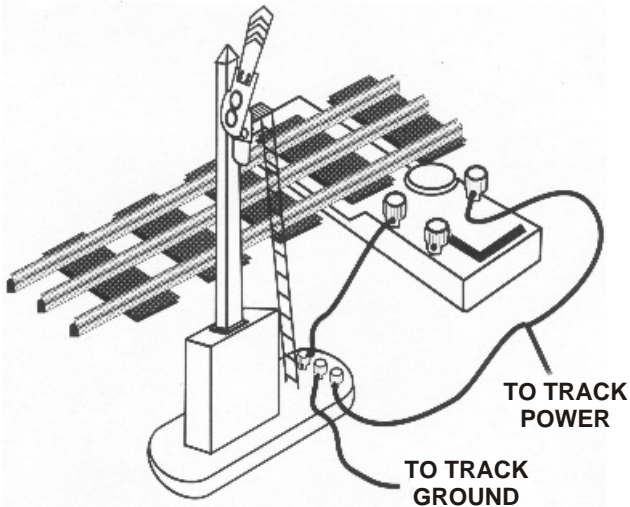

ADJUSTING YOUR TRACK ACTIVATION DEVICE

In order to properly use your Track Activation Device (TAD), it may be necessary to calibrate it to the weight of your track, engine and train consist. Fortunately this can be easily and quickly accomplished by following the steps listed below.

1. Place the TAD squarely under your track ties so that the ties rest parallel to the pressure plate.
2. If you are using non-O/27 track or running heavy engines and/or consists, turn the TAD adjustment knob counter-clockwise to tighten the TAD.
3. If you are using O/27 track or running light-weight engines and/or consists, turn the TAD adjustment knob clockwise to loosen the TAD.
4. To lockout the TAD, turn the adjustment knob counter-clockwise until it stops. Locking out the TAD prevents activation no matter what load is placed upon it. Locking out the TAD also allows you to deactivate devices without disconnecting them from your layout.



www.railking.com